



• Fall Protection • Competent Training • Netting • PPE

New Orleans: (504) 733-1808
 Houston: (713) 671-6061
 New York: (845) 548-5655
 California: (714) 994-3070

GeneralWorkProducts.com
 PalmerSafetyUS.com

TECHNICAL SPECIFICATIONS

Palmer Safety X75



Part #: G4575

The Palmer Safety X75 glove with velcro strap delivers an ANSI Cut Level A7 and an ANSI Puncture Level 5. The red, sandy nitrile anti vibration padded palm provides optimal abrasion and cut resistance along with a strong grip in dry and wet environments. The light and breathable 13-gauge High Performance Polyethylene (HPPE) backing provides a moisture wick material with the flexibility needed to get any job done. There is a reinforced support between the thumb and forefinger to prevent wear along with a stitched Hi-Vis TPR for ideal impact resistance.

APPLICATIONS

General Construction, Industrial, Tool Use, Power Tools, Material Handling, Demolition and Assembly, Wet and Dry Conditions, Heavy Lifting, Oil and Gas Industry

TECHNICAL DATA

Material	High Performance Polyethylene (HPPE) / Thermoplastic-Rubber (TPR)
Color	Red / Hi-Vis Yellow / Black
Cuff Style	Adjustable Velcro Closure
Packaging	Individually packaged, sold by the dozen; 5 dozen per case

PERFORMANCE PROPERTIES

ANSI Cut Level A7
ANSI Puncture Level 5
ANSI Abrasion Level 6
ANSI Tear Level 4
ANSI Impact Level 1



SIZE CHART

Part #	G4575S	G4575M	G4575L	G4575XL	G4575XXL
Size Available	S	M	L	XL	2XL
Total Length (cm)	23	24	25	26	26.5
Palm Width (cm)	8.50	9.50	10.30	11.0	11.5

Specifications are subject to change without notice. General Work Products makes no warranties to the use for a specific use or installation of products referred to, no guarantee of satisfactory results from reliance upon contained information or recommendations and disclaims all liability for resulting loss or damage. General Work Products recommends installing the herein specified products in accordance with ANSI A-10-11-1989 and OSHA 1926.502 or all applicable local, state or federal requirements. Correct installation is the sole responsibility of the user/installer.